


# Chinese Moor Line Configuration

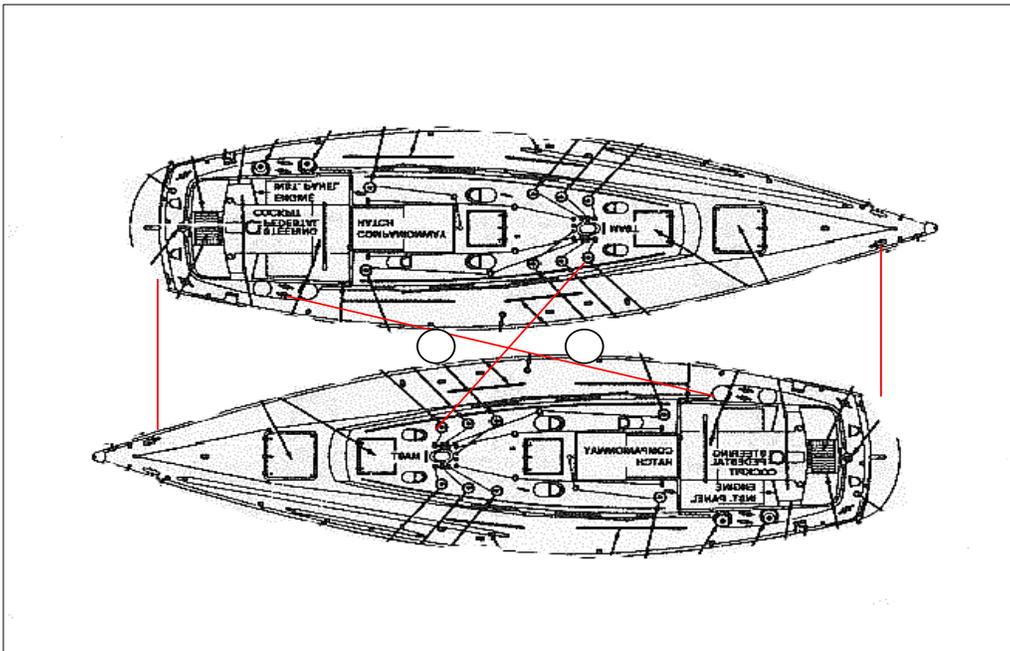

Outboard vessel provides both fenders  
Outboard vessel pass all four lines to inboard vessel.  
Inboard vessel cleats all four lines.  
Outboard vessel adjust line length.

Pass both spring lines over the toe rail and under the lifelines aft of amidships stanchion. Do not pass spring lines through the amidships closed chock.