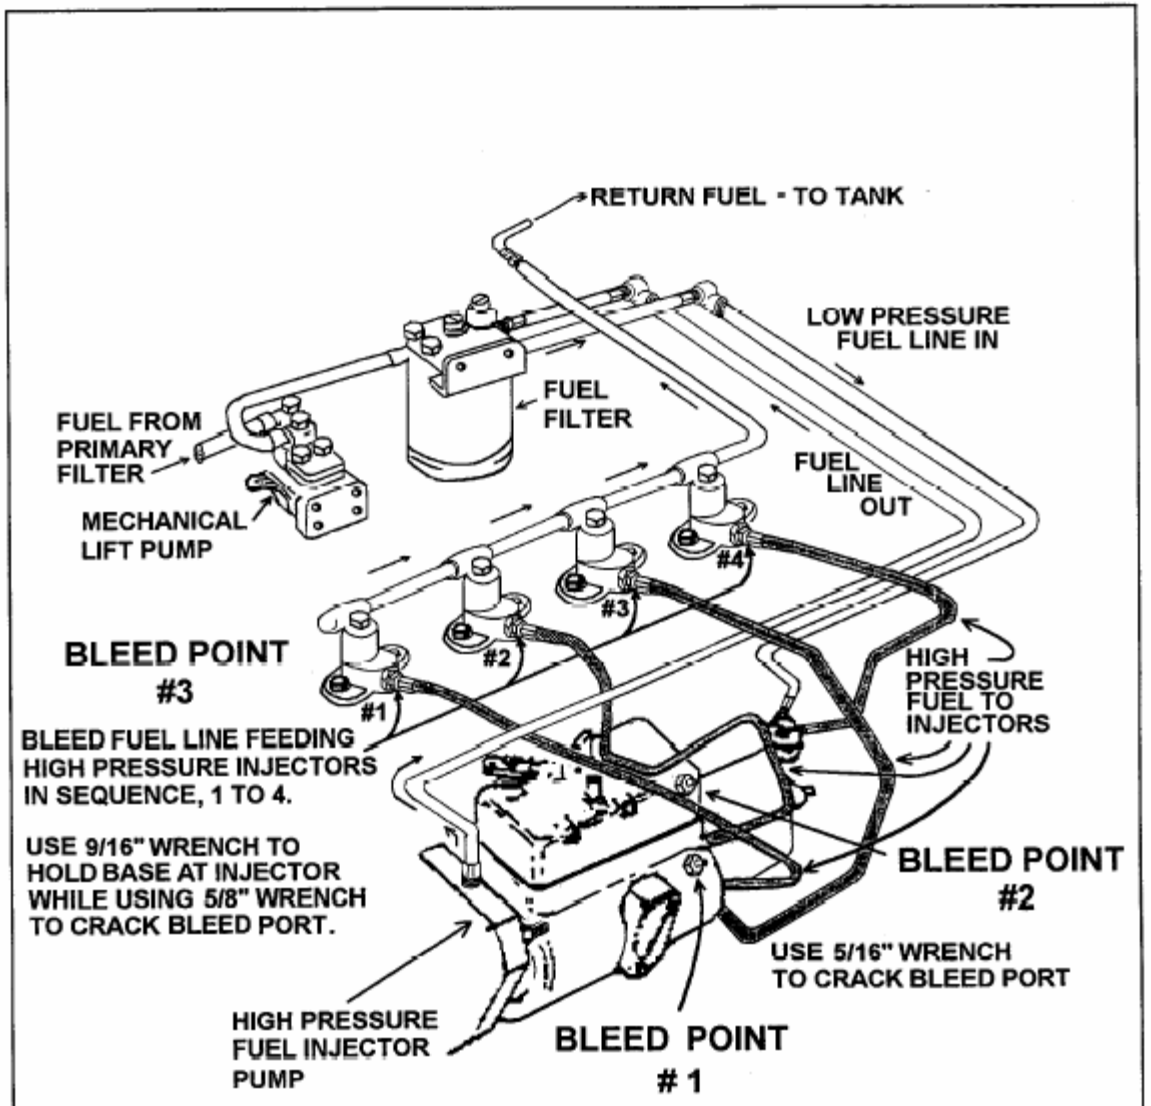

Figure 4-1. Engine Bleed Points

Throttle and Transmission Button

ENGINE STOP

Navy 44 Fuel Shut Off Valves

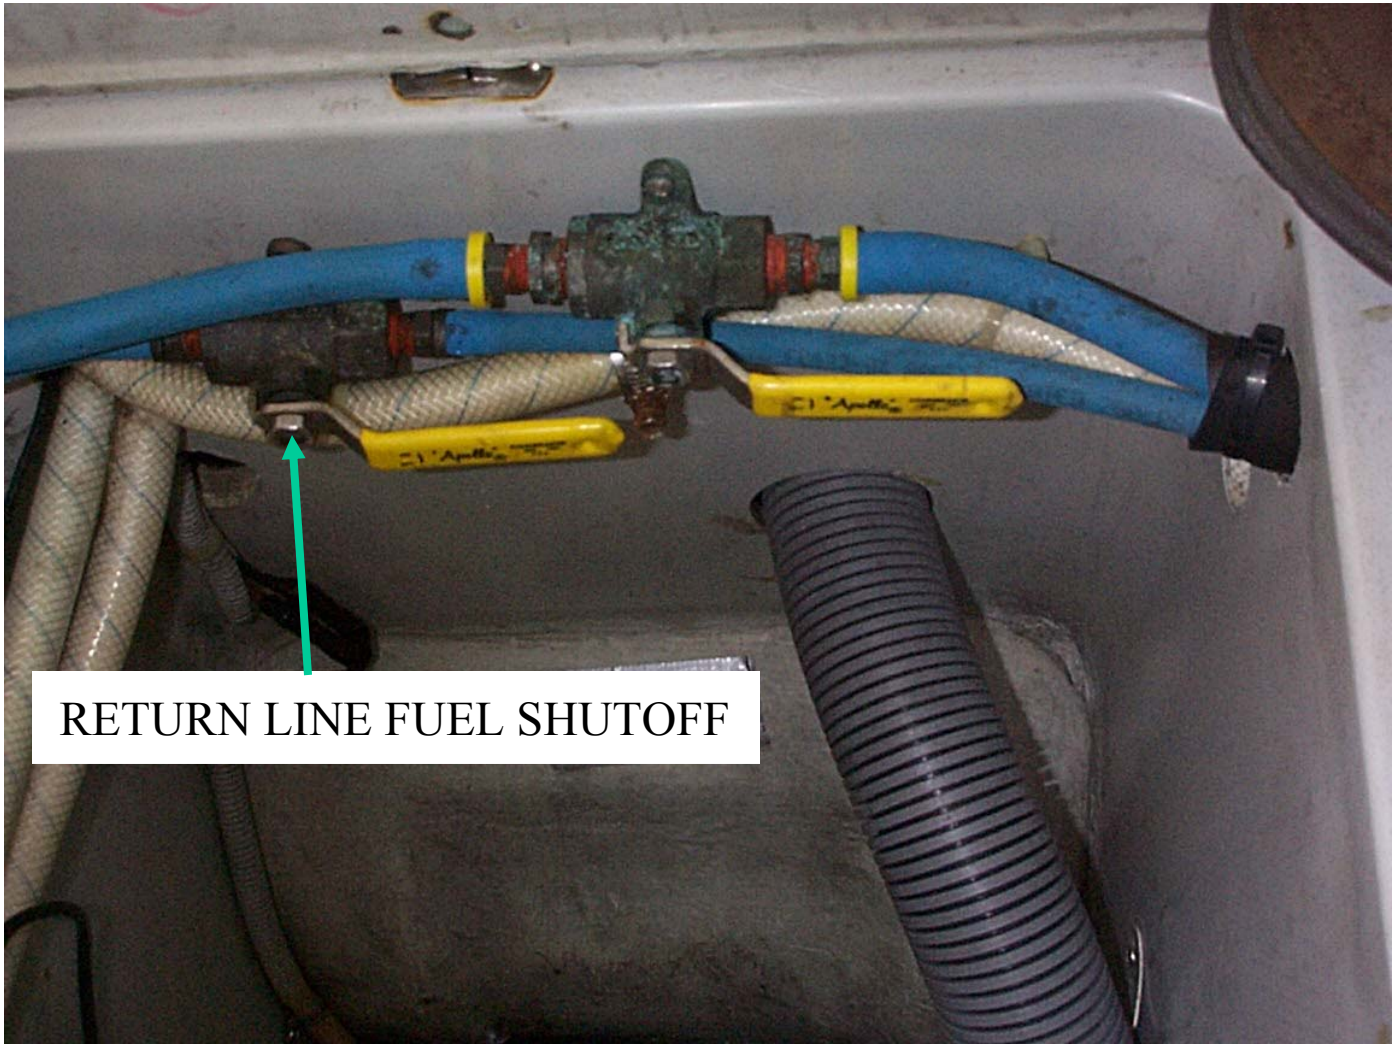

INJECTOR PUMP

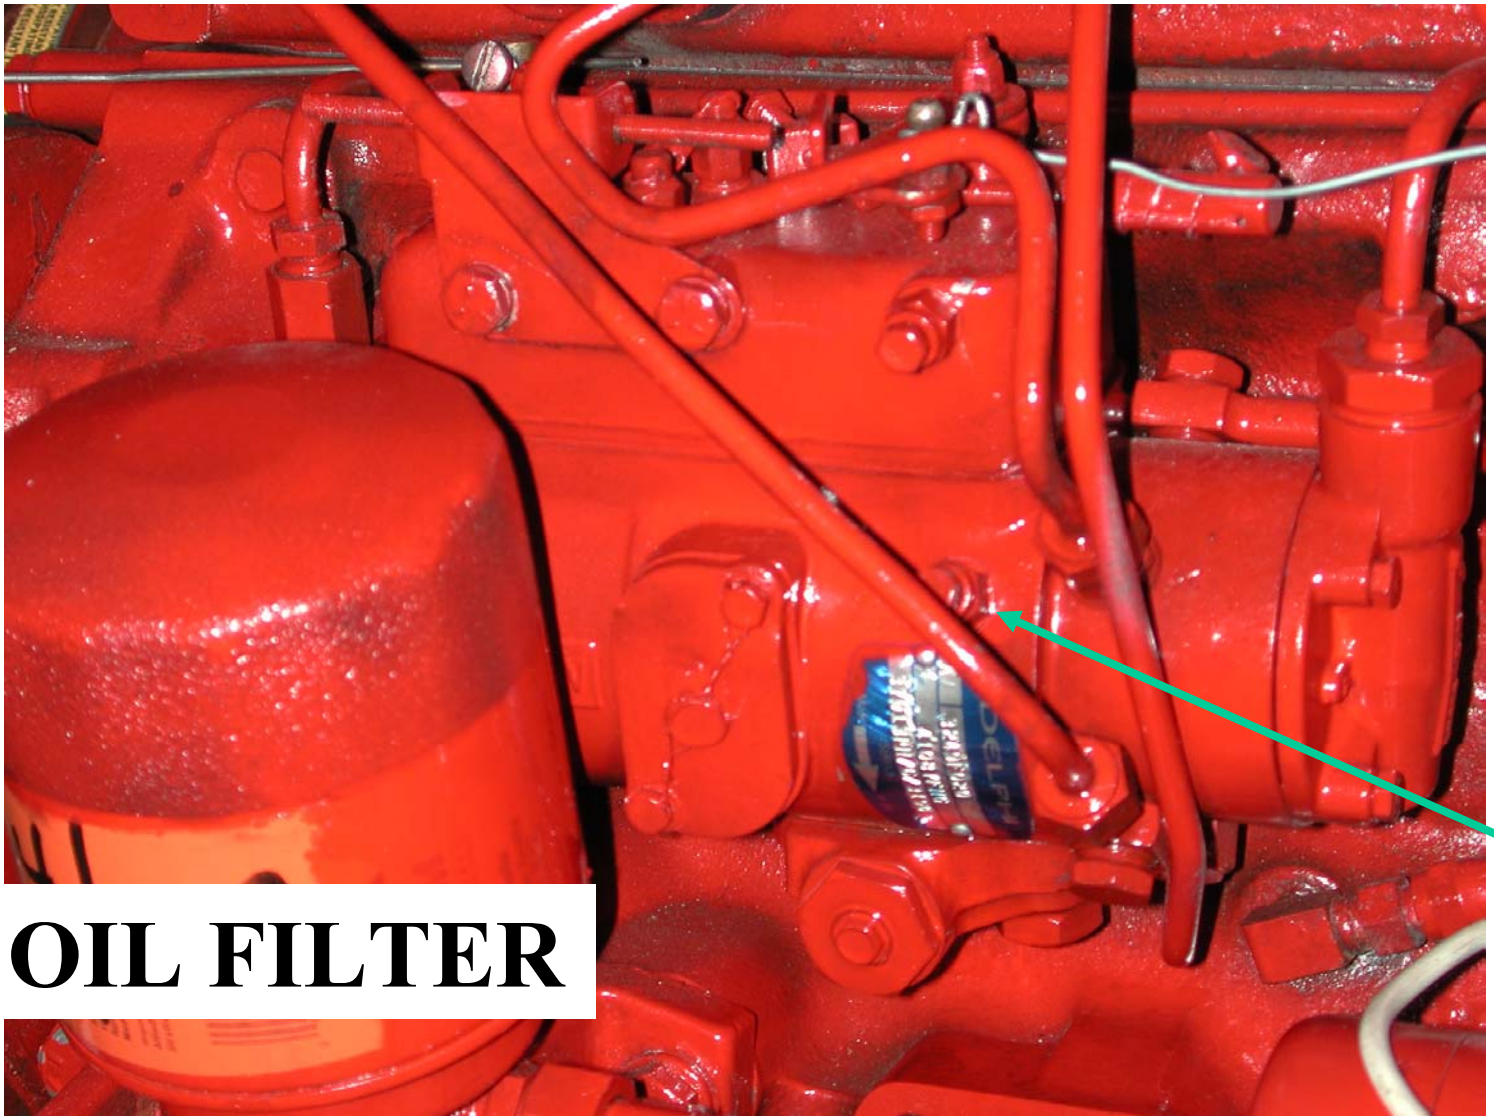

Open Bleed Point
#1 5/16 Inch Box
End

FUEL LIFT PUMP

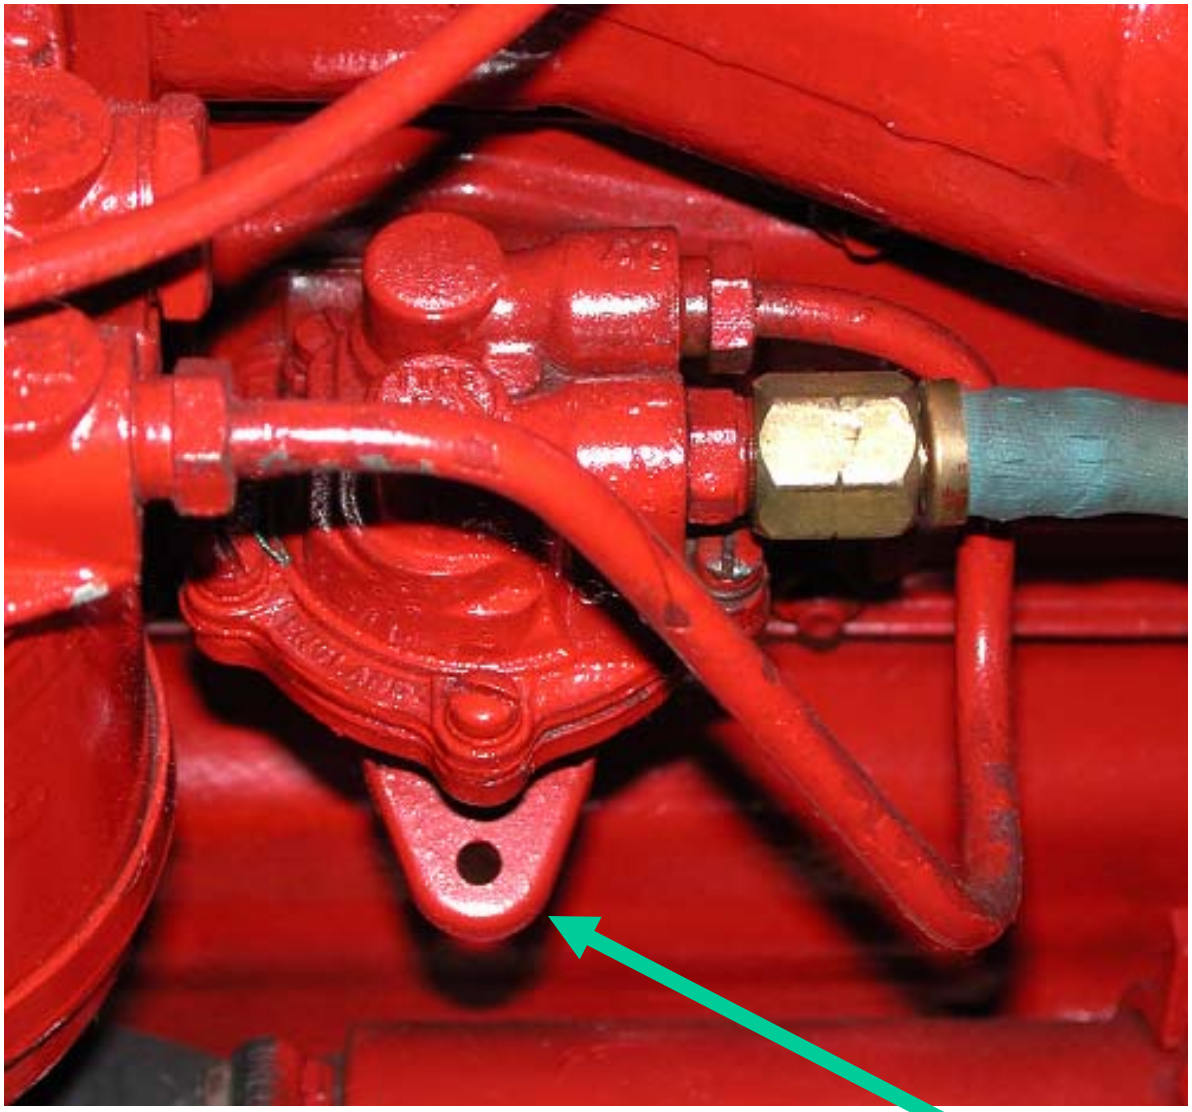

Hand Pump

INJECTOR PUMP

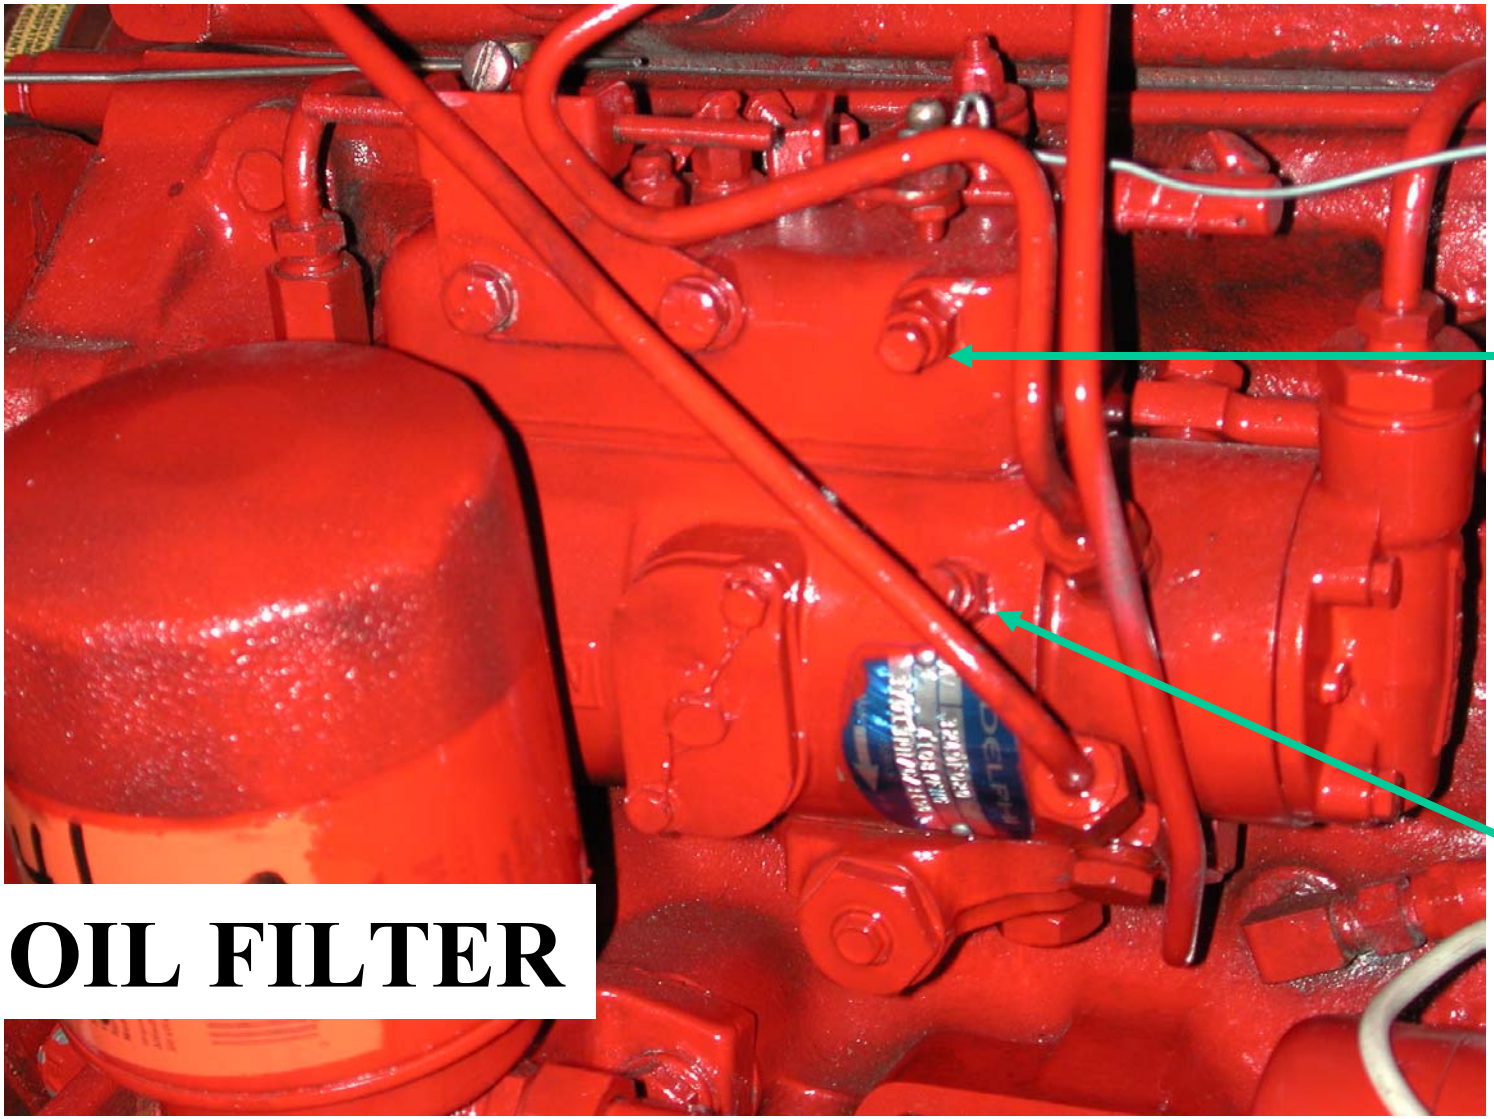

Open Bleed Point#2 5/16 Inch

Close Bleed Point#1 5/16 Inch

FUEL LIFT PUMP

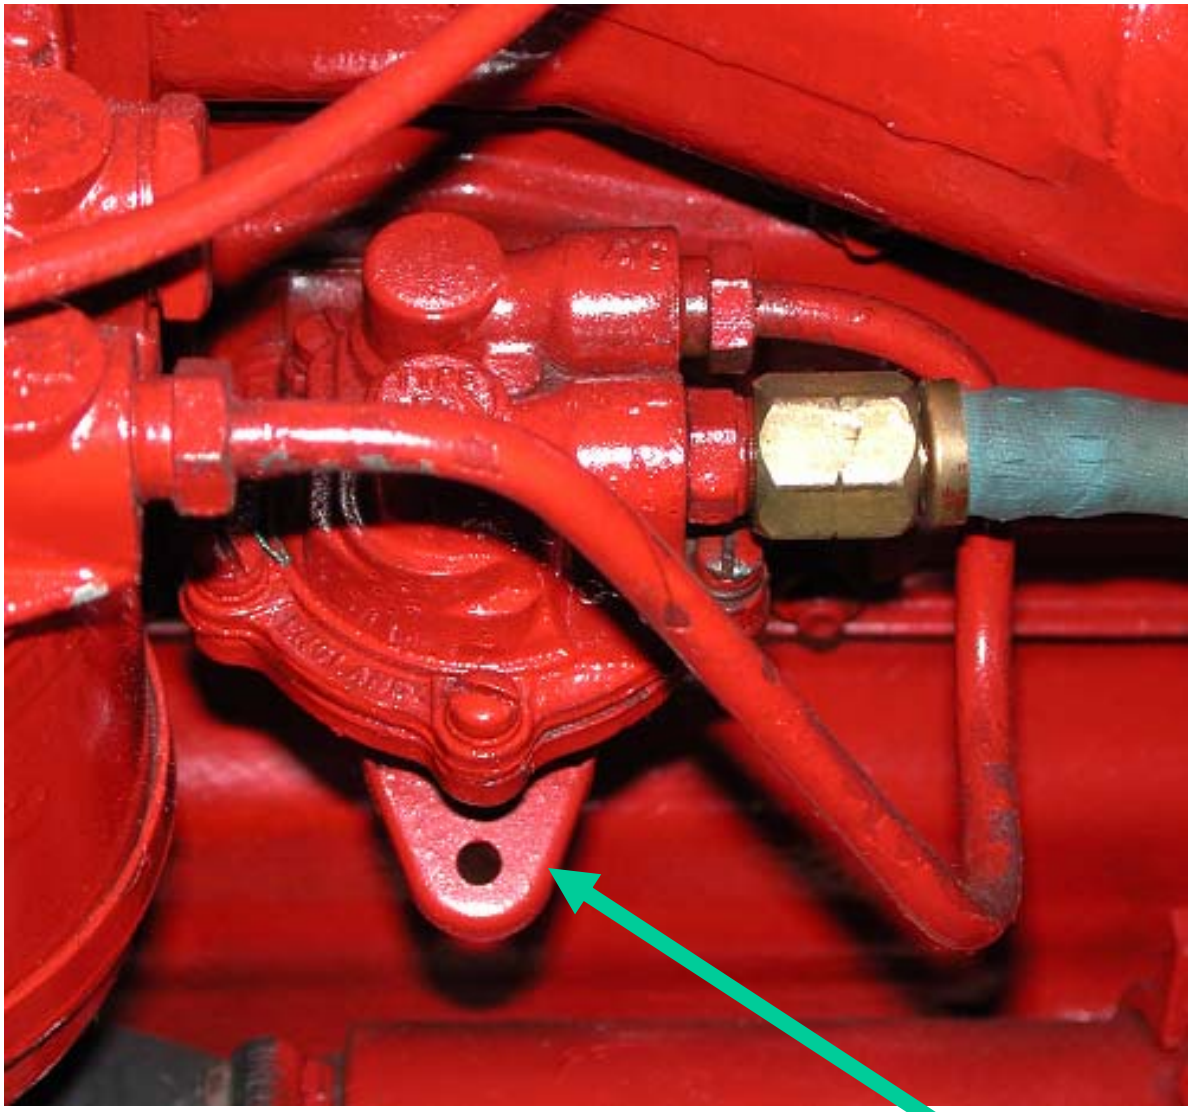

Hand Pump

INJECTOR PUMP

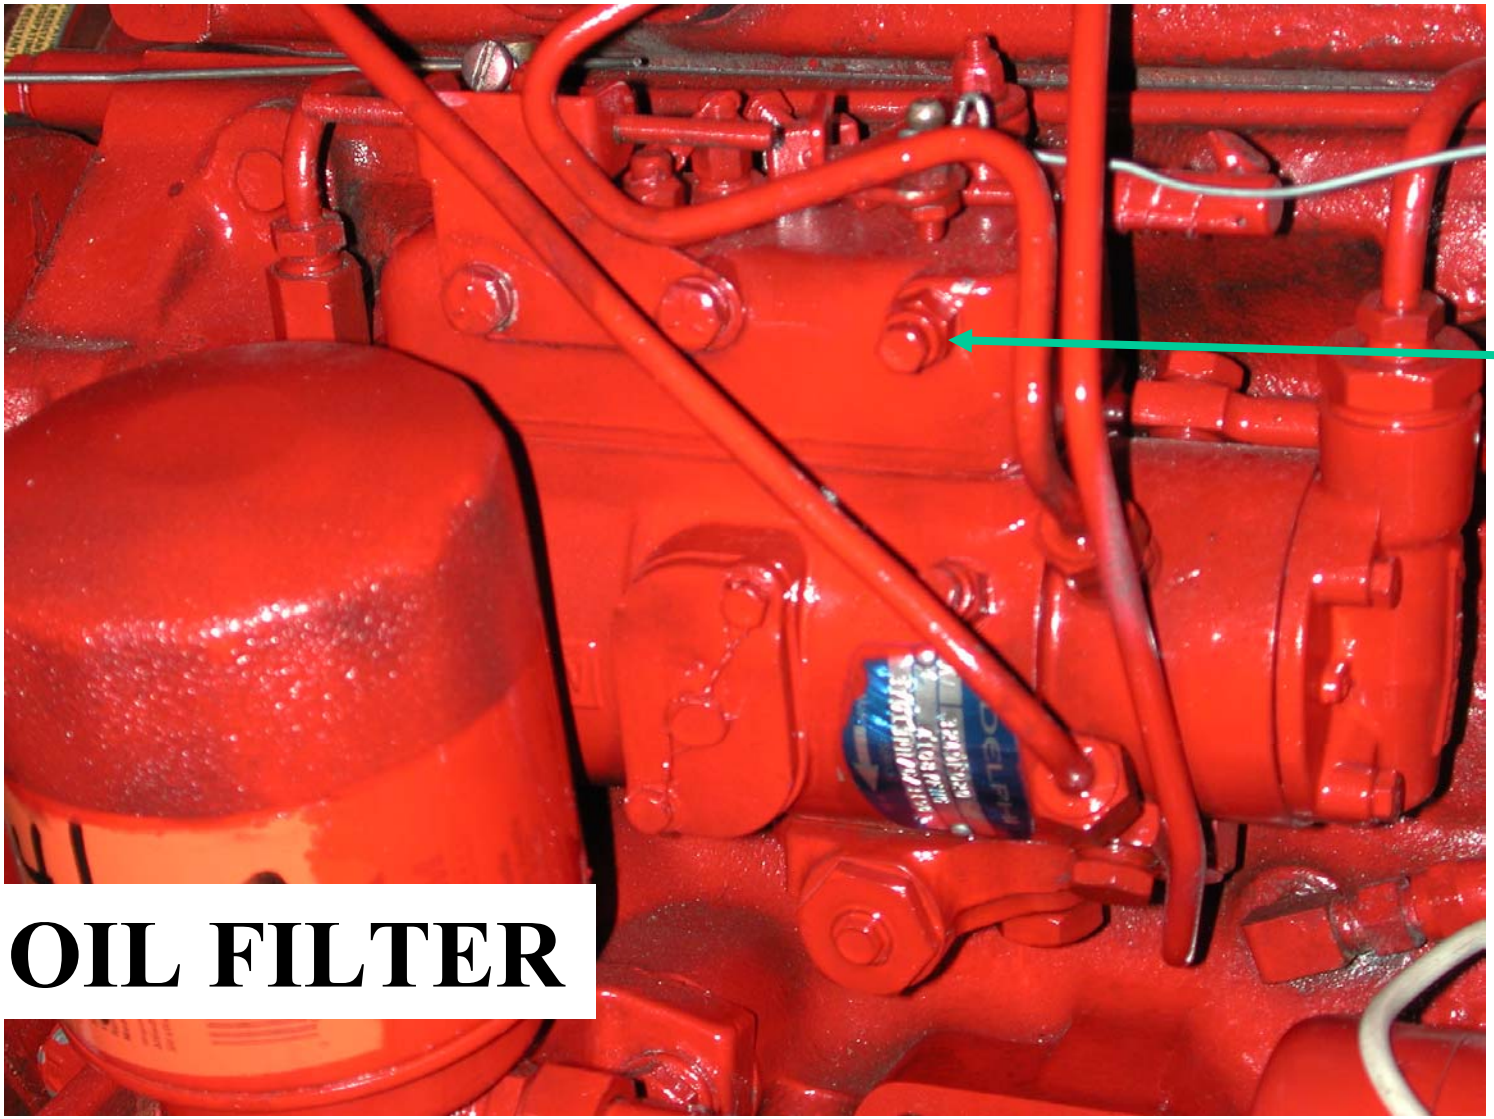

Close Bleed Point#2 5/16 Inch

INJECTORS

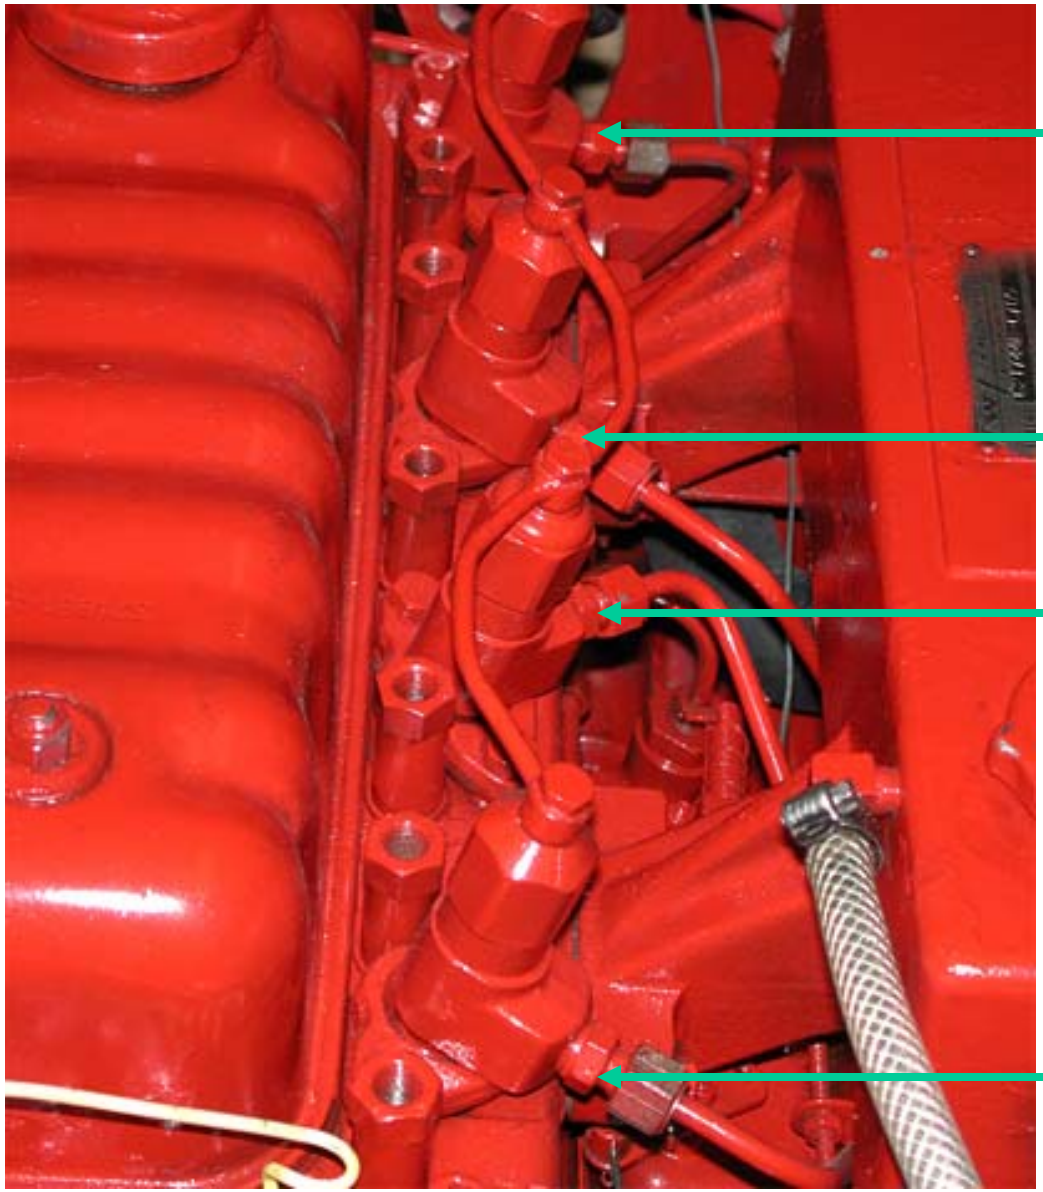

Bleed Point #3-1

5/8 Inch

Bleed Point #3-2

5/8 Inch

Bleed Point #3-3

5/8 Inch

Bleed Point #3-4

5/8 Inch

Crack all 4 Injector bleed points

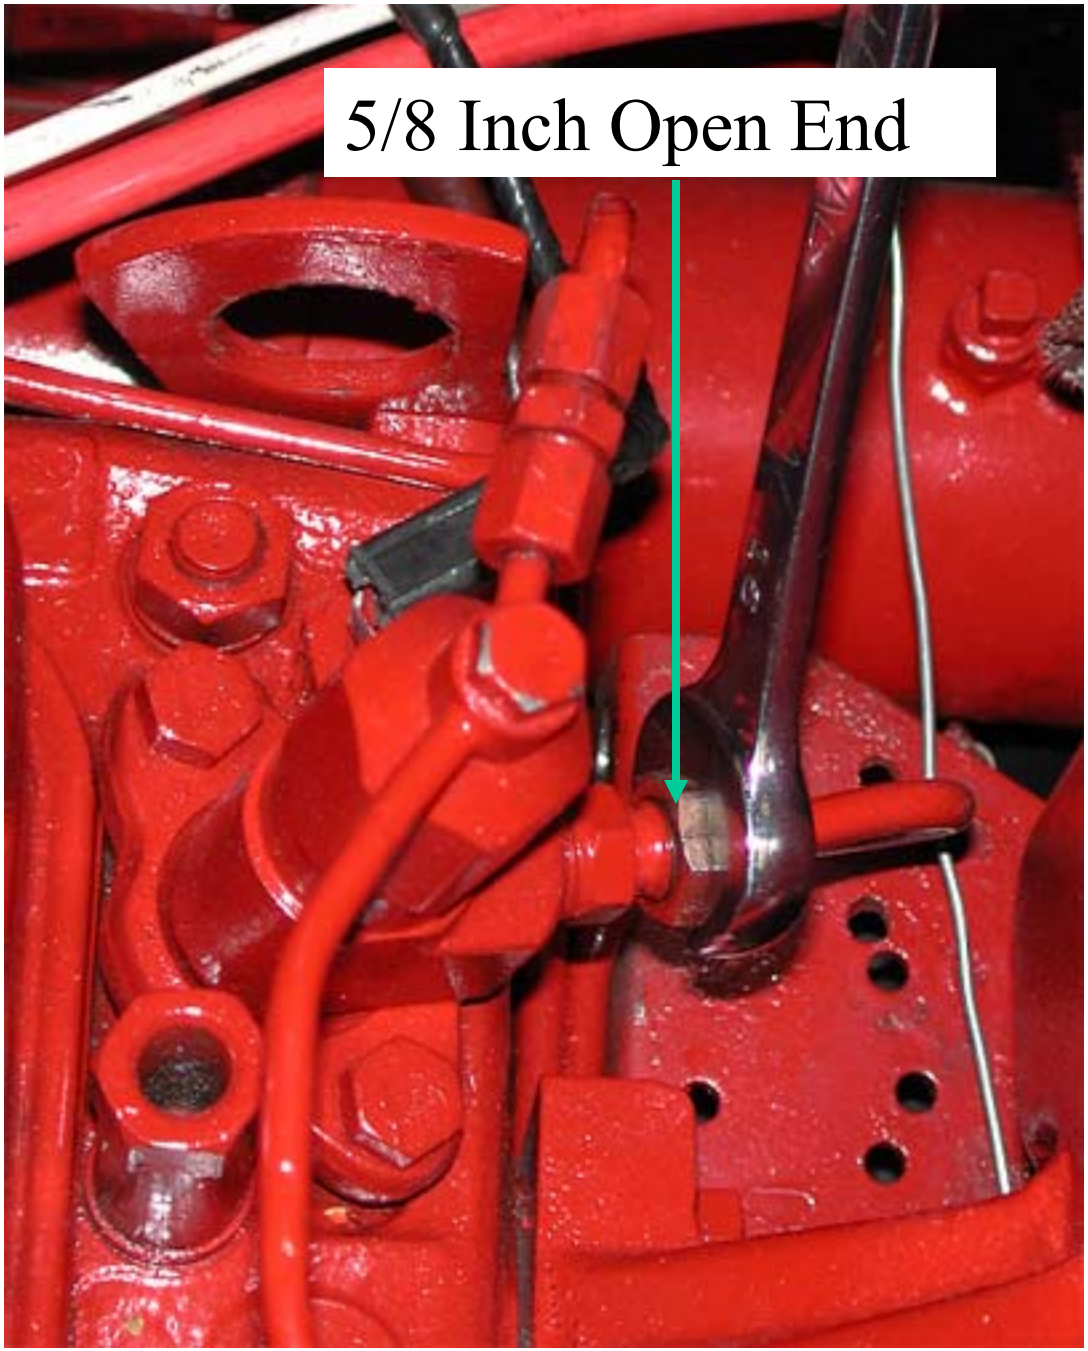
5/8 Inch Open End

Emergency Start Panel
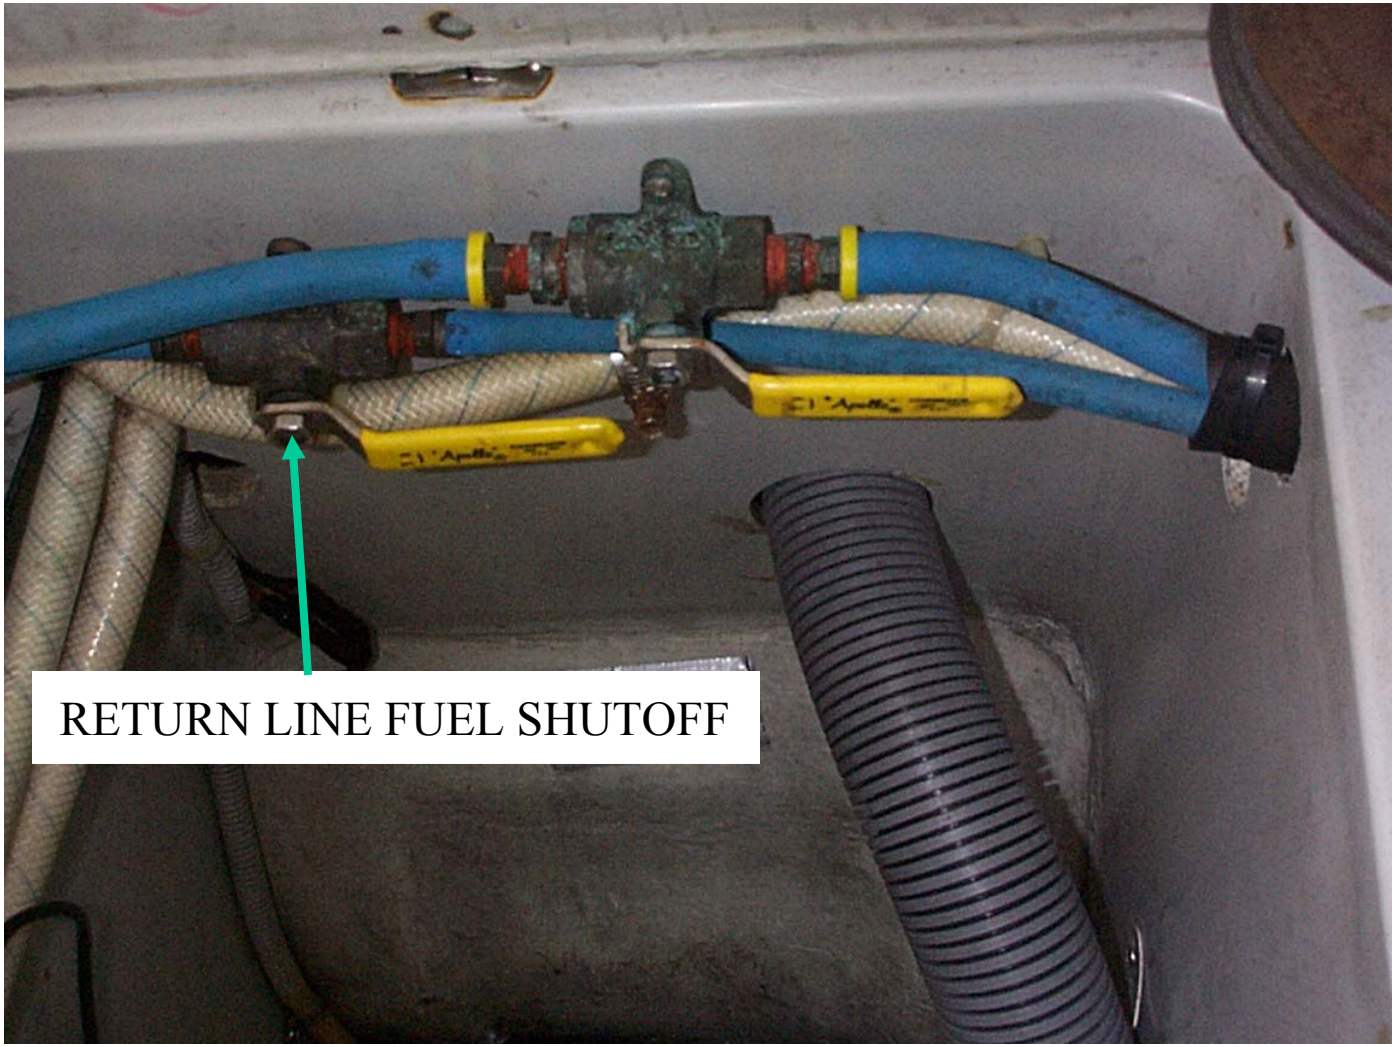
Navy 44 Fuel Shut Off Valves